AKM 990 PRODUCT DESCRIPTION SHEET

DE AT GB IE FR NL BE ES PT IT GR

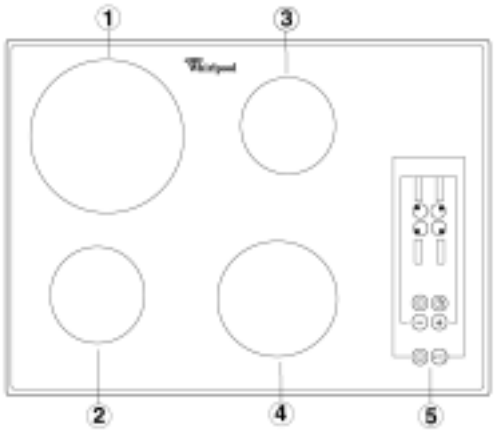

1. Rear left round induction cooking zone Ø 210 mm
2. Front left round induction cooking zone Ø 145 mm
3. Rear right round induction cooking zone Ø 145 mm
4. Front right round induction cooking zone Ø 180 mm
5. Touch control module

DIMENSIONS OF THE HOB

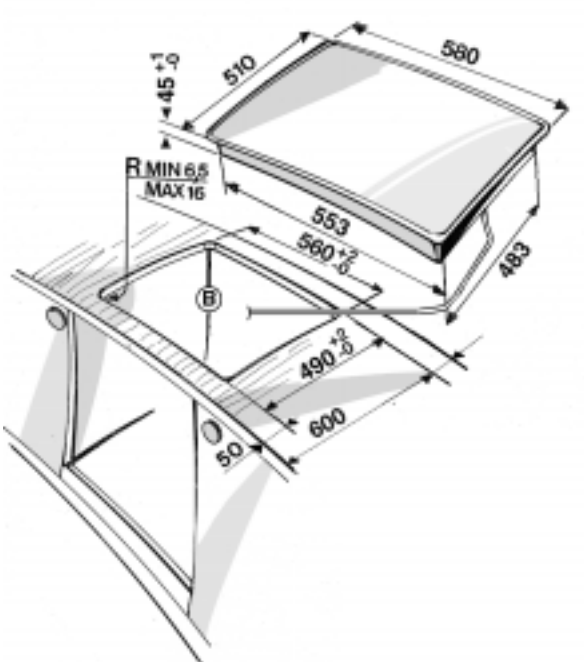

HOW TO USE YOUR HOB

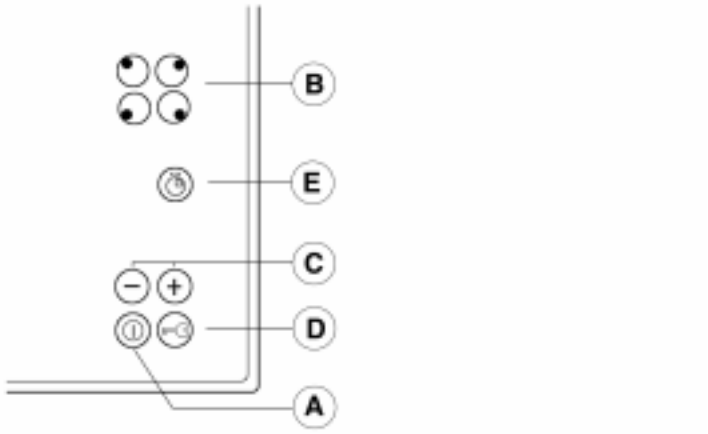

A	- On/Off
B	- Cooking zone selection
C	- Power selection
D	- Childlock key
E	- Timer

Press the button "**A**" to switch on the hob. Press one of the buttons of section "**B**" corresponding to the cooking zone you intend to use. Select the cooking power required with +/- buttons of section "**C**" (number **9** on display corresponds to maximum temperature and **1** to the minimum). You can disable the heater by pressing simultaneously the + and - symbols.

In order to prevent children from use or to clean the glass ceramic surface, you can lock all the functions by pressing the key symbol "**D**".

Booster: The rear left heater is provided with a booster to reach quickly the maximum temperature level. Once level **9** is reached, press again on + to activate the booster. A red LED and a **P** will appear on the display.

Timer: A timer can be used to any selected burner. You first need to select the heater on which you want the timer to operate and then, by pressing the button "**E**", you can activate the timer and with + and - set the cooking time. When the cooking time is terminated, the timer turns off the heater and disactivates the selection. A buzzer operates for 30 seconds to indicate the end of the timer operation.